



Make a T-Shirt  
with Transfer Sheets

# T-Shirt with Transfer Sheets

## What you need

- Cricut Maker® or Cricut Explore® cutting machine
- StandardGrip Machine Mat
- Cricut EasyPress™ 2 or Cricut EasyPress\*
- Cricut EasyPress Mat
- Cricut® T-Shirt Blank
- Infusible Ink™ Transfer Sheet
- Butcher paper (2)
- Cardstock (80 lb.), White (or 4 layers of butcher paper)
- Lint roller
- Scissors
- Tweezers
- Design Space® software on mobile device or computer

\*All time and temp settings listed in these step-by-step instructions are for Cricut EasyPress 2. For original Cricut EasyPress settings, refer to our Heat Transfer Guide at [cricut.com/heatguide](https://cricut.com/heatguide)

# Cut your design




Place Infusible Ink Transfer Sheet onto StandardGrip Mat, liner side down.



In Design Space, select and size your design to fit on your T-Shirt blank.

**Note:** Be sure to **Mirror** your design.

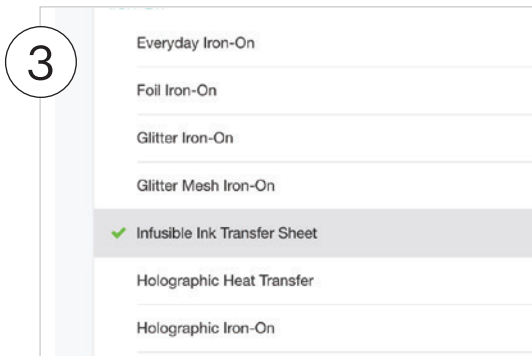

Select Browse all materials, then Infusible Ink Transfer Sheet. If using a Cricut Explore machine, turn Smart Set® Dial to **Custom** first.



Load mat and blade into machine, then press flashing **Go** button.

# Weed your cut design



Remove cut design from mat and trim away unused area of sheet. Gently roll cut design so cut lines separate and are more visible. "Cracking" the cut this way makes it easier to remove excess paper from in and around your design.




Use your fingers or tweezers to carefully remove the negative pieces from in and around your design, leaving design on liner. Trim clear liner so it does not extend beyond Cricut EasyPress heat plate.

# Apply your design



For this project, set your Cricut EasyPress 2 to 385°F (195°C) and 15 seconds.

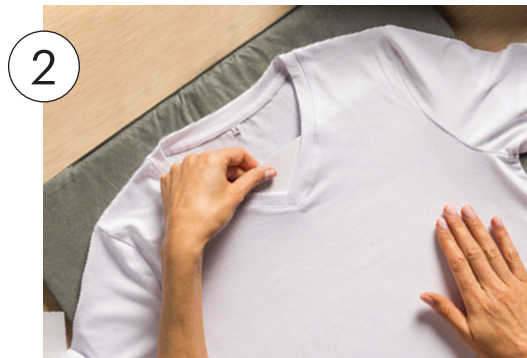

Place apparel blank on top of Cricut EasyPress Mat. Position sheet of white cardstock inside T-shirt to protect your mat and project.



**Do not skip this step:** Use a fresh adhesive to lint-roll the entire surface. Even miniscule debris or fibers may create imperfections in the transfer.



Cover T-shirt with butcher paper.  
**Important:** Butcher paper must be larger than Cricut EasyPress heat plate.  
Note: Butcher paper comes in each package of Infusible Ink Transfer Sheets.



**Do not skip this step:** To remove moisture and wrinkles that result in unwanted effects, preheat application area at 385°F (195°C) for 15 seconds. Remove butcher paper and let T-shirt cool completely.



Place design face down on T-shirt with clear liner on top.

7



Cover design with butcher paper larger than Cricut EasyPress heat plate.

Tip: Never reuse butcher paper for another project.

8



Press at 385°F (195°C) for 40 seconds.

**Important:** Do not slide or move your hands or Cricut EasyPress during transfer. Keep the stack still while pressing.

9



When the beep sounds, slowly lift press. Try not to move the stack, including butcher paper. Let your project cool completely. Once cool, slowly remove butcher paper, then slowly remove the liner with design.

**Important:** If design separates from liner and remains on blank, remove with tweezers. Do not remove it using your fingers. This could cause an unwanted effect like ghosting or marbling.

10



You did it! Post a photo of your finished project.

**#infusibleink**

**CARE:** Machine wash inside out with cold water and mild detergent. Tumble dry low or line dry. Do not use fabric softener, dryer sheets, or bleach.